



Automatic Laminator Film Threading Instructions


Be sure to follow these steps before running the machine!

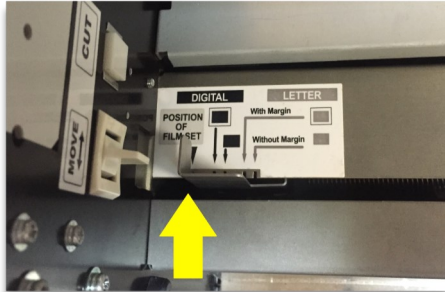


1. Set slitters to "Film Set Position."

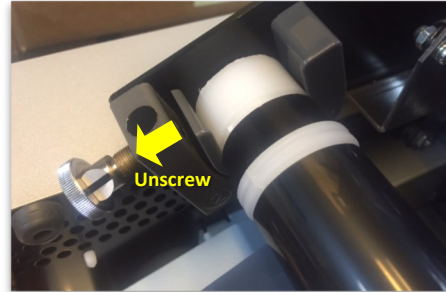

2. Remove film roll tension.

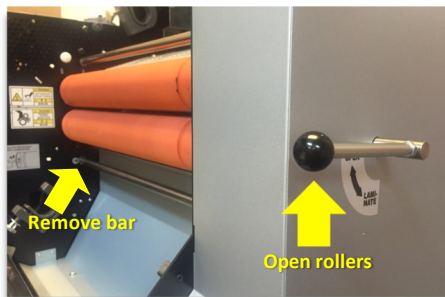


3. • Open rollers (rotate lever on side of machine to "Open").
- Remove old film.
 - Remove bar (push to one side and lift out).

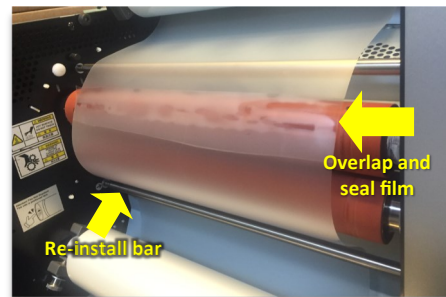

4. • Insert new film rolls (black line on roll to black dot on tensioner).
- Overlap film onto heat rollers to seal film together.
 - Re-install bar (reverse of removal; route film behind bar).



5. Manually push 2 sheets of 11"x17" chipboard through.

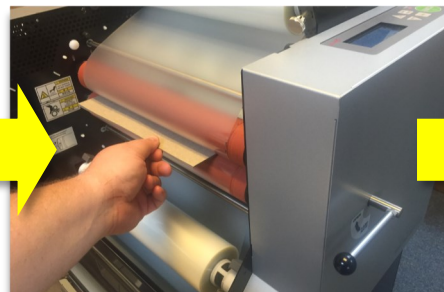

Keep pushing until the chipboard starts to exit the machine.



(Instructions continued on opposite side). ➡




➡ **For a complete video tutorial, scan code or visit:**
www.saddlepointsystems.com/resources/video-demonstrations/fujipla




SADDLE POINT SYSTEMS
DOCUMENT BINDING SOLUTIONS

Automatic Laminator Film Threading Instructions (Cont.)


Be sure to follow these steps before running the machine!

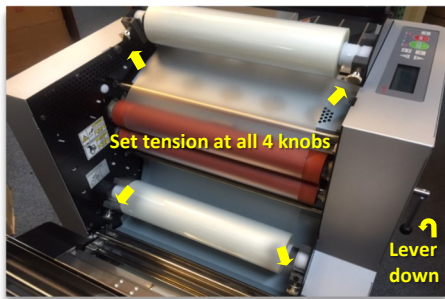



6. Evenly set tension on all four knobs and turn lever (from step 3) to "Laminate."

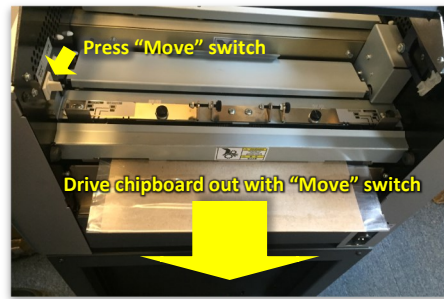

7. Use "Move" switch to drive chipboard out of machine.

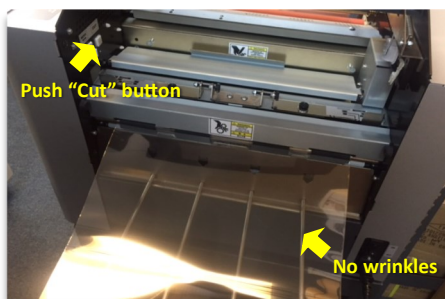

8. When lamination is clear and wrinkle free, push "cut" button, ...

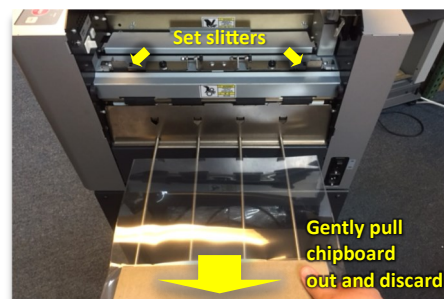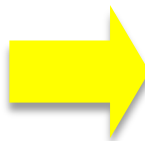

9. ...Pull threading card out of machine, set slitters to desired position, and laminate!



For a complete video tutorial, scan code or visit:
www.saddlepointsystems.com/resources/video-demonstrations/fujipla



SADDLE POINT SYSTEMS
DOCUMENT BINDING SOLUTIONS